



PARTS LIST

Index No.	Part No.	Description	No. Req'd	Index No.	Part No.	Description	No. Req'd
1	108232-1JB0	Screw	6	21	109021	Handle	1
2	1090002	Front Cap	1	22	109022-1ED0	Screw	2
3	1090003-2SP0	Piston	2	23	109023-1PC0	Trigger	1
4	1090004-1AA0	Plug	4	24	P-0030-220	Roll Pin	1
5	1090005-1VW0	Piston Ring	4	25	109025-1ED0	Screw	4
6	1090006-1SP0	Front Gasket	1	26	101107-1EAO	Nut	2
7	1090007	Body	1	27	101106-1EAO	Washer	2
8	1090008	Knob	1	28	109028-4SP0	Carrier	1
9	1090009-1GV0	Wear Plate	4	29	109029-1SC0	Pad Assembly	1
10	109010-1EC0	Screw	8	30	109030-1HB0	Side Strap	2
11	KA57-000	Bearing	4	31	109031-1ED0	Screw	12
12	109012-2PW0	Gear	2	32	109032-1SP0	Rear Gasket	1
13	109013-1GR0	Gear Shaft	2	33	109033	Rear Cap	1
14	109014-1ED0	Plunger	1	34	109034-1AA0	Bushing	1
15	O-1100-200	O-Ring	1	36	109036-1JB0	Valve Pin	1
16	109016-1GR0	Adjusting Shaft	1	37	O-0380-190	O-Ring	1
17	109017-1GR0	Valve	1	38	109038-1AA0	Valve Spring	1
18	109018-2GR0	Actuator Gear	1	39	109039-1JB0	Valve Plug	1
19	109019-1VW0	Washer	1	40	109040-1JB0	Screw	2
20	109020-1ED0	Screw	1	41	109041	Hose Adapter	1