


2615


3/8" (1/4") AIR CONTROL UNIT

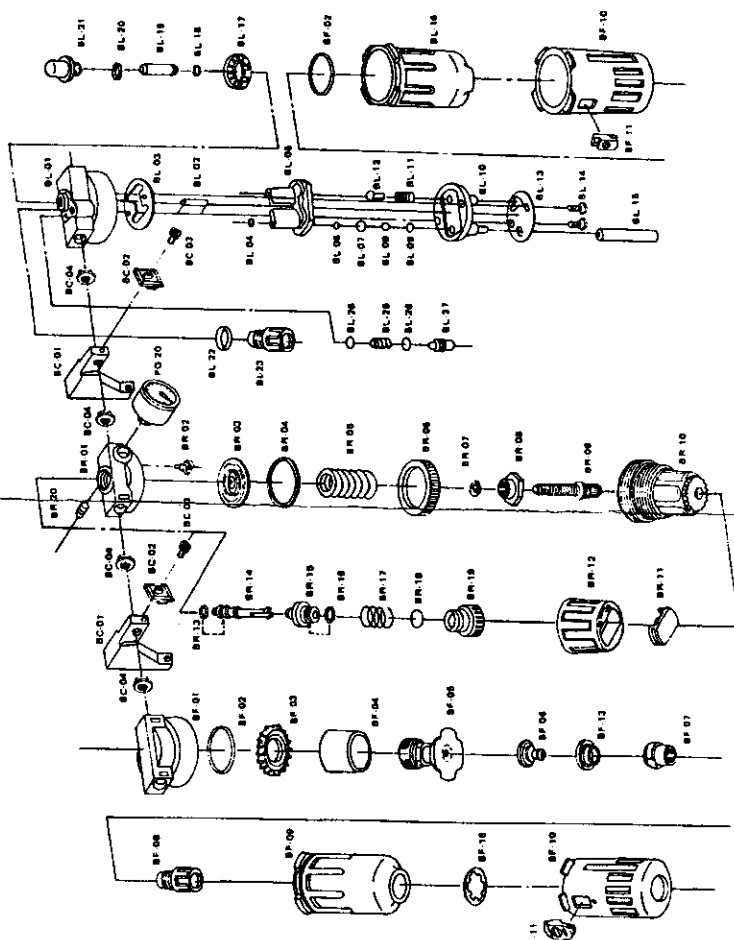

PARTS LIST

Part No.	Description	Part No.	Description	Part No.	Description		
BF-01	Filter Body	23	BR-10	Governor Socket	45	BL-11	Spring
BF-02	O-Ring	24	BR-11	Push Button	46	BL-12	Slack Adjustor
BF-03	Spiral Baffle	25	BR-12	Pressure Governor	47	BL-13	Setting up piece
BF-04	Filter Element	26	BR-13	O-Ring	48	BL-14	Screw
BF-05	Umbrella Baffle	27	BR-14	Spool	49	BL-15	Tube
BF-06	Drain Cap	28	BR-15	Spring Pressure Plug	50	BL-16	Plastic Bowl
BF-07	Drain Nut	29	BR-16	O-Ring	51	BL-17	Adjusting Ring
BF-08	Drain Screw	30	BR-17	Spring	52	BL-18	O-Ring
BF-09	Plastic Bowl	31	BR-18	O-Ring	53	BL-19	Drip Pipe
BF-10	Bowl Guard	32	BR-19	V-Join Cap.	54	BL-20	O-Ring
BF-11	Push Button Key	33	BR-20	Screw	55	BL-21	Val-Dome
BF-13	Rubber	34	PG-01	Pressure Gauge	56	BL-22	O-Ring
BF-16	Locking Ring	35	BL-02	Distance Piece	57	BL-23	Filling Plug
BR-01	Regulator Body	36	BL-02	Distance Piece	58		
BR-02	Exhaust Nozzle	37	BL-03	Packing	59	BL-25	Spring
BR-03	Pressure Packing	38	BL-04	O-Ring	60	BL-26	O-Ring
BR-04	Plastic Ring	39	BL-05	O-Ring	61	BL-27	Ejector Pin
BR-05	Anchor Ring	40	BL-06	O-Ring	62	BC-01	Mounting Bracket
BR-07	E-Ring	41	BL-07	Filter Leaf	63	BC-02	Anchor Block
BR-08	Regulating Nut	42	BL-08	Ball Steel	64	BC-03	Screw
BR-09	Governor Spindle	43	BL-09	O-Ring	65	BC-04	Packing
		44	BL-10	Governor			

3/8" (1/4") PIGGYBACK AIR CONTROL UNIT

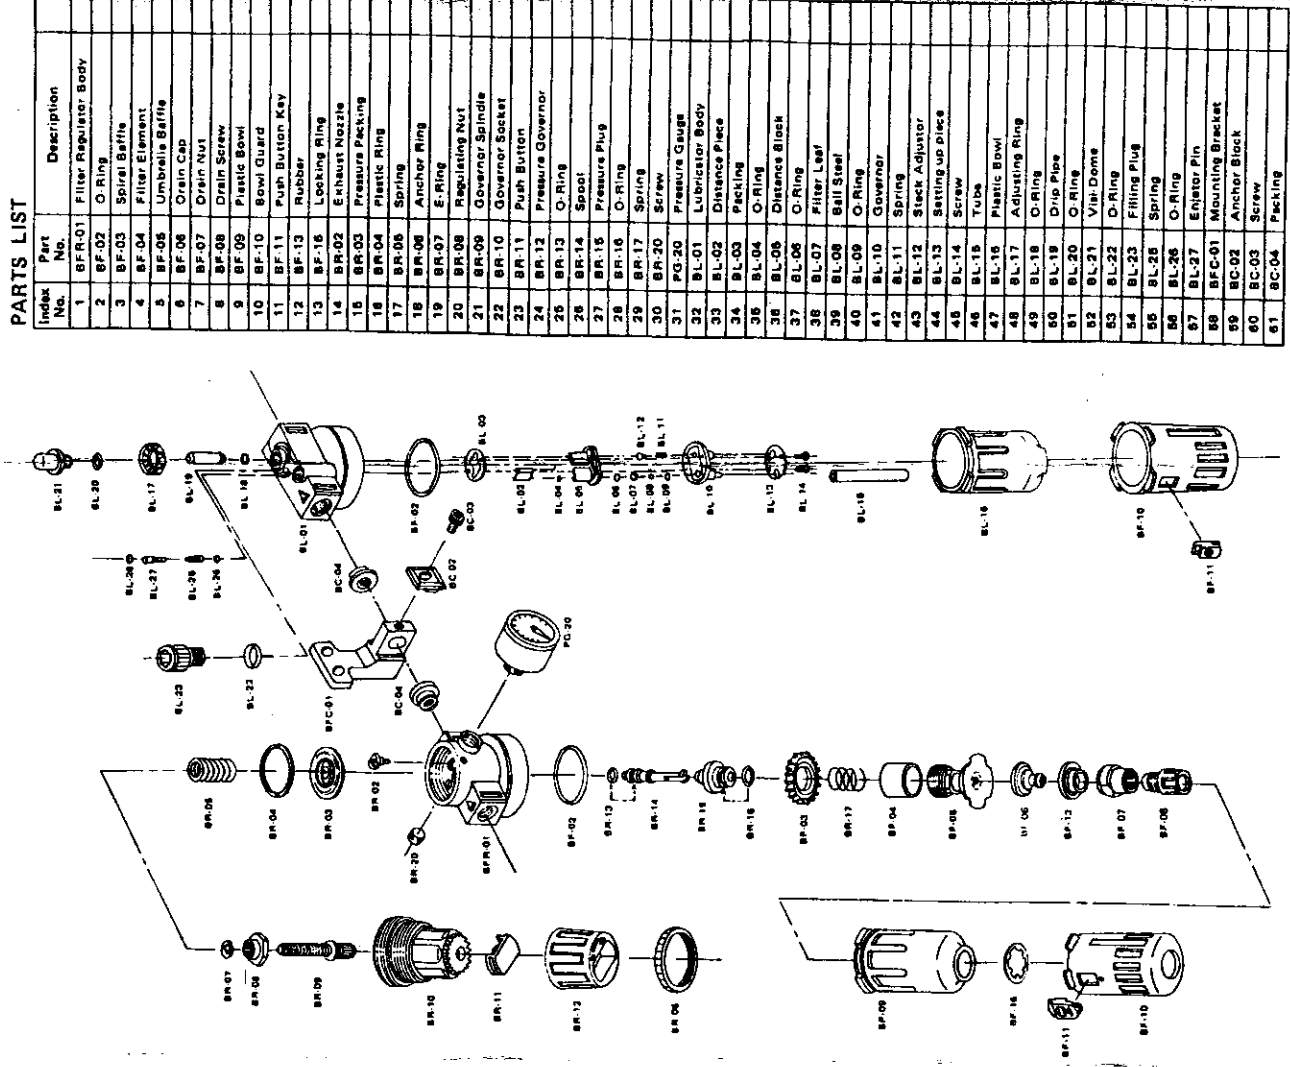

PARTS LIST

Index No.	Part No.	Description
1	BF-01	Filter Regulator Body
2	BF-02	O-Ring
3	BF-03	Spiral Baffle
4	BF-04	Filter Element
5	BF-05	Umbrella Baffle
6	BF-06	Drain Cap
7	BF-07	Drain Nut
8	BF-08	Drain Screw
9	BF-09	Plastic Bowl
10	BF-10	Bowl Guard
11	BF-11	Push Button Key
12	BF-13	Rubber
13	BF-16	Locking Ring
14	BR-02	Exhaust Nozzle
15	BR-03	Pressure Packing
16	BR-04	Plastic Ring
17	BR-05	Anchor Ring
18	BR-06	Spring
19	BR-07	E-Ring
20	BR-08	Regulating Nut
21	BR-09	Governor Spindle
22	BR-10	Governor Socket
23	BR-11	Push Button
24	BR-12	Pressure Governor
25	BR-13	O-Ring
26	BR-15	Pressure Plug
27	BR-16	O-Ring
28	BR-14	Spool
29	BR-17	Spring
30	BR-20	Screw
31	PG-20	Pressure Gauge
32	BL-01	Lubricator Body
33	BL-02	Distance Piece
34	BL-03	Packing
35	BL-04	O-Ring
36	BL-05	Distance Block
37	BL-06	O-Ring
38	BL-07	Filter Leaf
39	BL-08	Ball Steel
40	BL-09	O-Ring
41	BL-10	Governor
42	BL-11	Spring
43	BL-12	Slack Adjustor
44	BL-13	Setting up piece
45	BL-14	Screw
46	BL-15	Tube
47	BL-16	Plastic Bowl
48	BL-17	Adjusting Ring
49	BL-18	O-Ring
50	BL-19	Drip Pipe
51	BL-20	O-Ring
52	BL-21	Val-Dome
53	BL-22	O-Ring
54	BL-23	Filling Plug
55	BL-25	Spring
56	BL-26	O-Ring
57	BL-27	Ejector Pin
58	BL-28	Mounting Bracket
59	BC-01	Anchor Block
60	BC-02	Screw
61	BC-04	Packing