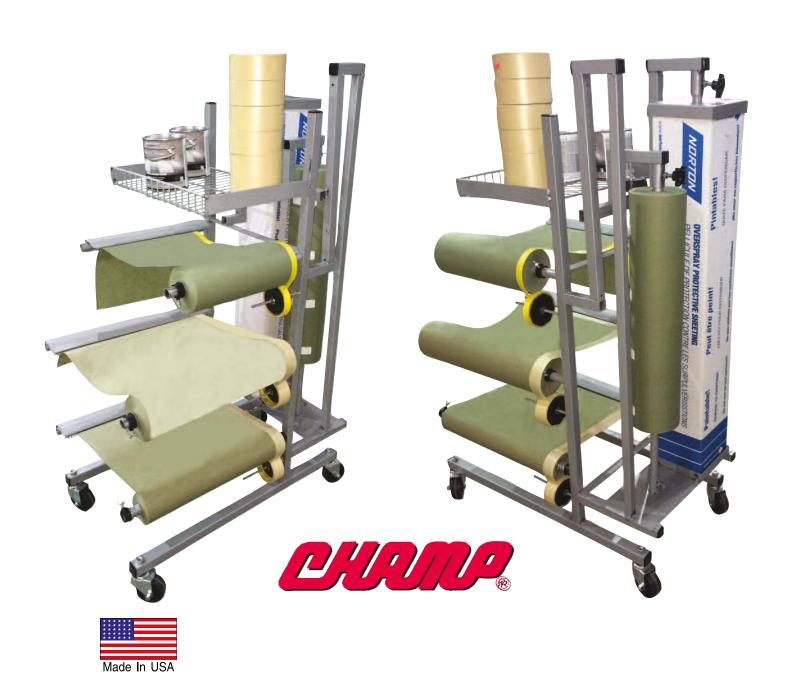
## **Champ Deluxe Mobile Masker**

Part #6266 Assembly Instructions




Auto Body Toolmart
Champ Frame Straightening Equipment, Inc.

2545 Millennium Dr., Elgin IL, 60124 800-382-1200 www.autobodytoolmart.com


## **Parts List**


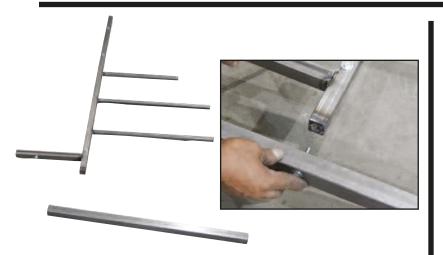
## Instructions



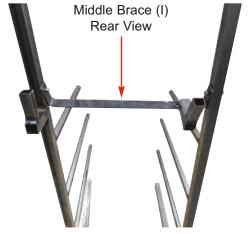Attach each foot to the left and right sides



**3.** Attach the middle brace (I) to the second holes down, from the top of the masker



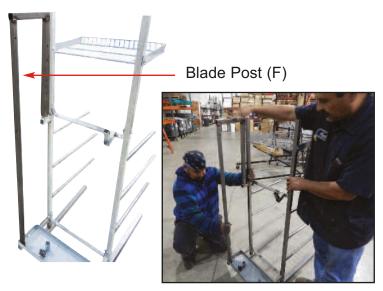
**6.** Attach the basket (C) to the top holes of the masker



Join both sides together by attaching the lower brace (H) to each side



Attach the bottom tray to the lower back of the masker



Attach the blade post (F) to the rear left side (viewed from the rear) of the masker






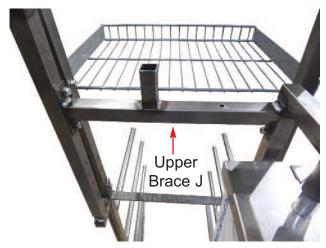

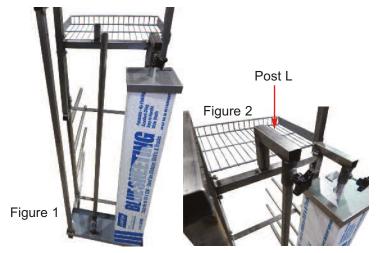


Figure 3 Figure 2 Figure 4 Figure 1

Slide the shorter pole (G) (figure 1) through the plastic sheeting box and install onto the right side of the lower rear tray on the back of the masker. Place the top plate (E) (figure 2) on the top of the box. Attach post (K) to the middle brace (I) (figure 3). Attach the pole (G) to the post (K) (figure 4)



Attach upper brace (J). This brace bolts to the blade post (F) on the left side and post (K) on the right side



Attach the longer pole (G) to the left side of the lower rear tray on the back of the masker (figure 1) and then attach post (L) to the upper brace (J) and to the pole (G) (figure 2)



Figure 1



Figure 2





Figure 3

Attach (3) blades (N) (figure 1), (4) tape hubs (O) (figure 2) and locking collars, springs and washers (figure 3)

Just load your paper rolls and tape, and your Champ Deluxe Mobile Masker is ready to be used!