



1414 Bumper Caddy



Auto Body Toolmart
Champ Frame Straightening Equipment, Inc.
760 Industrial Drive ~ Unit D ~ Cary, IL. 60013 (800) 382-1200

Parts List

- 1 - Support Base
- 2 - Wheels
- 2 - Push Cap Wheel Retainers
- 1 - Support Stand
- 1 - Support Stand Extension
- 2 - Arm Holders
- 1 - 3/8" x 2 1/2" Bolt
- 1 - 3/8" Flat Washer
- 1 - 3/8" Lock Washer
- 1 - 3/8" Nut
- 7 - Tension Knobs
- 2 - Bumper Support Arms
- 2 - Bumper Support Arms with 24" Chain

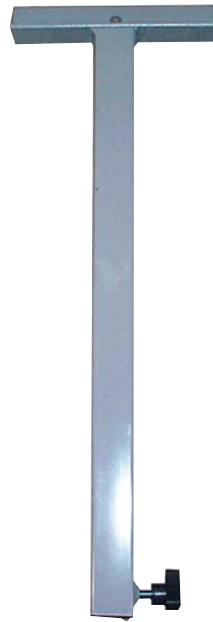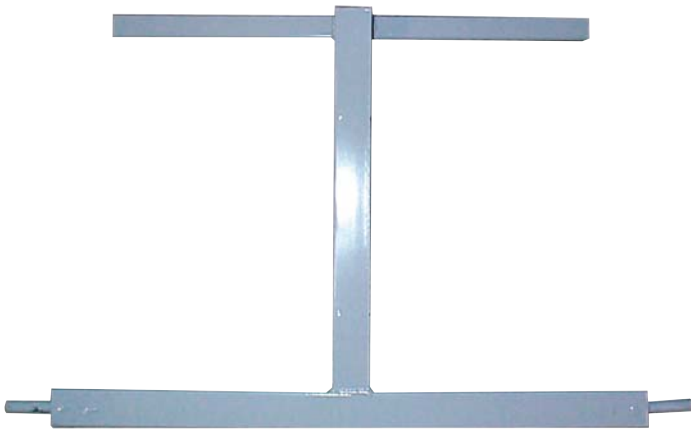

Instructions

1.



- Lay support base flat on ground
-

2.



- Attach support stand to support base using 3/8" x 2 1/2" bolt with flat washer. Attach lock washer and nut and tighten support stand to support base.
-

3.



- Insert support stand extension into support stand. Screw in tension knob on support stand. This allows for height adjustment.

4.




- Insert arm holders into support stand and screw in tension knobs

5.



- Insert bumper support arms into arm holders. Screw in tension knobs

6.

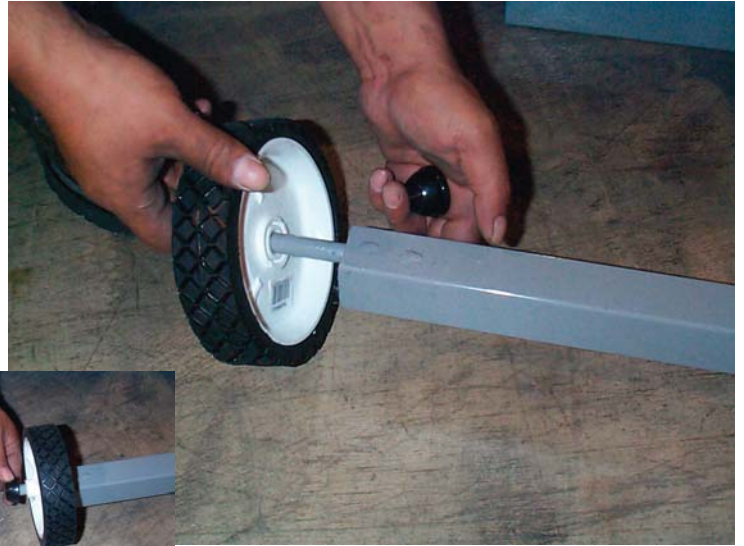

- Attach wheels to base using push cap wheel retainers. Gently tap them on using a rubber mallet



The bumper caddy is fully adjustable to hold bumpers in different positions