

4007 Power Pull Post

Made In USA

CHAMP
Frame Straightening Equipment Inc.

Lace pull chain over Floating Pulley Assembly(A) from front side of post, down through the Chain Retarder (B).


Pull chain down around and under Idle Pulley(C) and attach to Power Lever Arm(D).

Place link vertically into slot in Lever Arm Yoke(D).

Clevis Hook(E) on Floating Pulley Assembly hooks to Chain Between two Anchor Pots.

Hook chain through Secondary Safety Tie(F) and let hang loose to each Anchor Pot.

Connect Hydraulic Pump.
Attach Pull Clamps and Pull chain and begin pull.

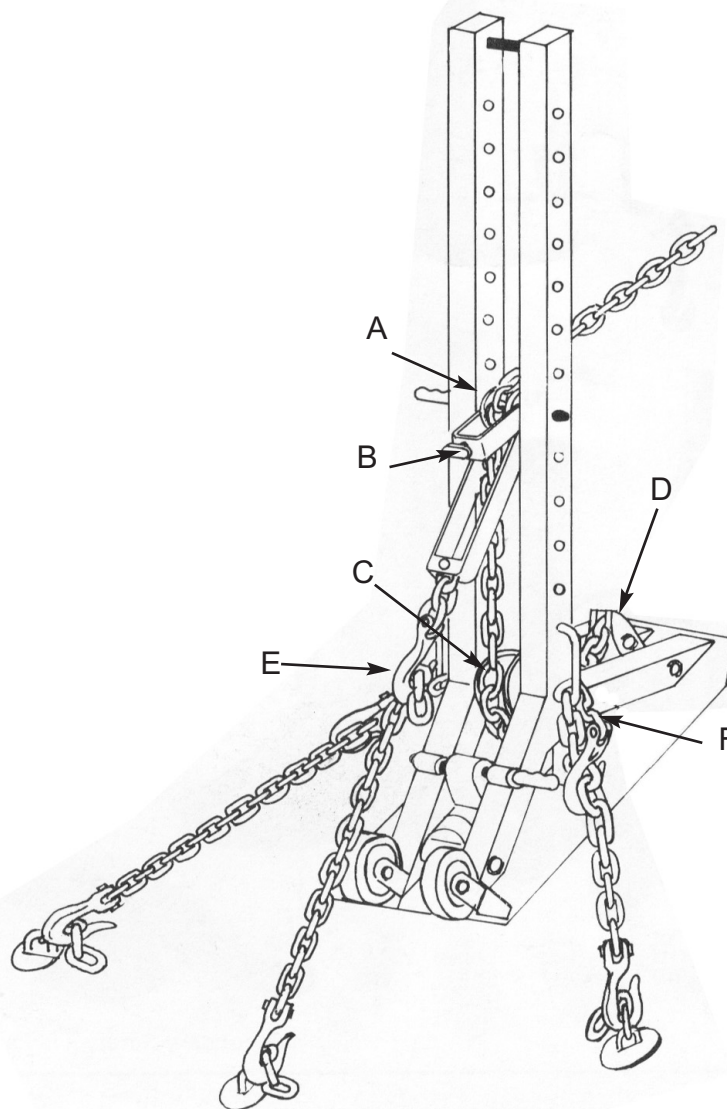

WARNING

Read all instructions completely before attempting to use unit. Improper or incomplete assembly could result in damage to Power or injury to user.

Auto Body Toolmart

Champ Frame Straightening Equipment, Inc.

2545 Millennium Dr. Elgin, IL 60124 (800) 382-1200

www.autobodytoolmart.com