

Champ Mobile 4 Roll Masker

Part #4201 Assembly Instructions






CHAMP®

Auto Body Toolmart
Champ Frame Straightening Equipment, Inc.
2545 Millennium Dr., Elgin IL, 60124
800-382-1200 www.autobodytoolmart.com

Parts List

- 1 - Bottom Support Base (a)
- 1 - Vertical Bracket (b)
- 1 - Long Paper Holder (c)
- 2 - Medium Paper Holders (d)
- 1 - Short Paper Holder (e)
- 2 - Utility Hooks (f)
- 2 - Wheels (g)
- 2 - Wheel Anchor Caps (g)
- 8 - 5/16" Bolts (h)
- 16 - 5/16" Flat Washers (h)
- 8 - 5/16" Lock Washers (h)
- 12 - 5/16" Nuts (h)

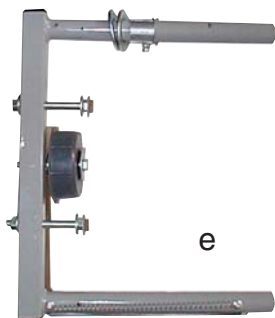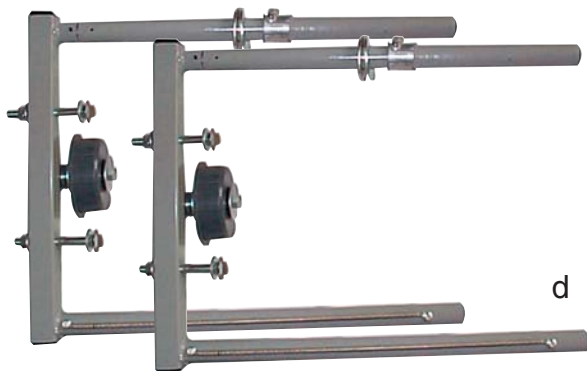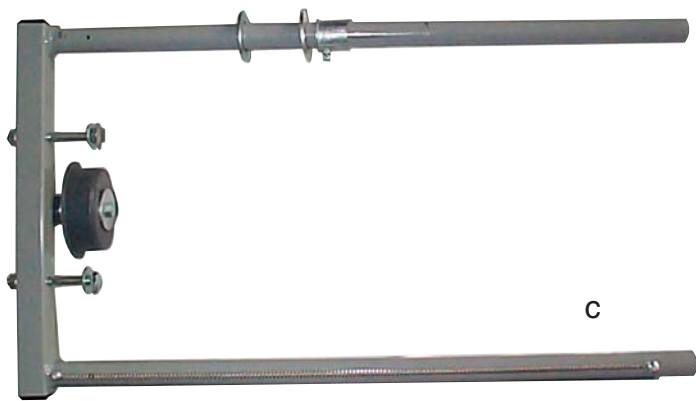

I n s t r u c t i o n s



Attach wheels to bottom support base. Push on wheel anchor cap.

1.



Attach long paper holder to vertical bracket in the bottom holes with bolts.

3.



Attach the short paper holder to the vertical bracket in the upper most bolt holes. Attach the two utility hooks in the holes below the short paper holder.

5.

2.

Insert vertical bracket into bottom base. Tap in lightly with rubber mallet if necessary.



Secure to the vertical bracket with washers & nuts.

4.



Repeat with the two medium paper holders.



Your Mobile Four Roll Masker for Paper & Tape is ready for paper & tape

Loading Paper & Tape



1.

Slide large washer onto paper bar.



2.

Slide paper roll onto paper bar as far as it will go. Add washer and paper lock. Tighten paper lock to hold paper roll in place.



3. Push roll of masking tape onto tape holder. Make sure it is snug.

4.



Pull tape and attach to paper roll. Make sure the tape overlaps the paper roll to have an exposed edge of tape to stick to surface to be painted.

5.



Insert paper with tape into paper cutting guide. Make sure you go over the spring. Do not put paper under spring or tape will stick to bar.



Your Mobile Four Roll Masker for Paper & Tape is loaded and ready to use.