

Aluminum Door Stand

Made In USA



CHAMP[®]
Frame Straightening Equipment Inc.



Auto Body Toolmart
Champ Frame Straightening Equipment, Inc.
2545 Millennium Dr., Elgin, IL 60124 (800) 382-1200
www.autobodytoolmart.com

Parts List

- A** 1 - Base
- B** 1 - 45" Square Tubing
- C** 2 - 3/8" Bolts
- D** 2 - Sliders with hooks
- E** 4 - Wheels - 2 with brake and 2 without brake, 4 - 1/2" lock washers, 4 - 1/2" nuts

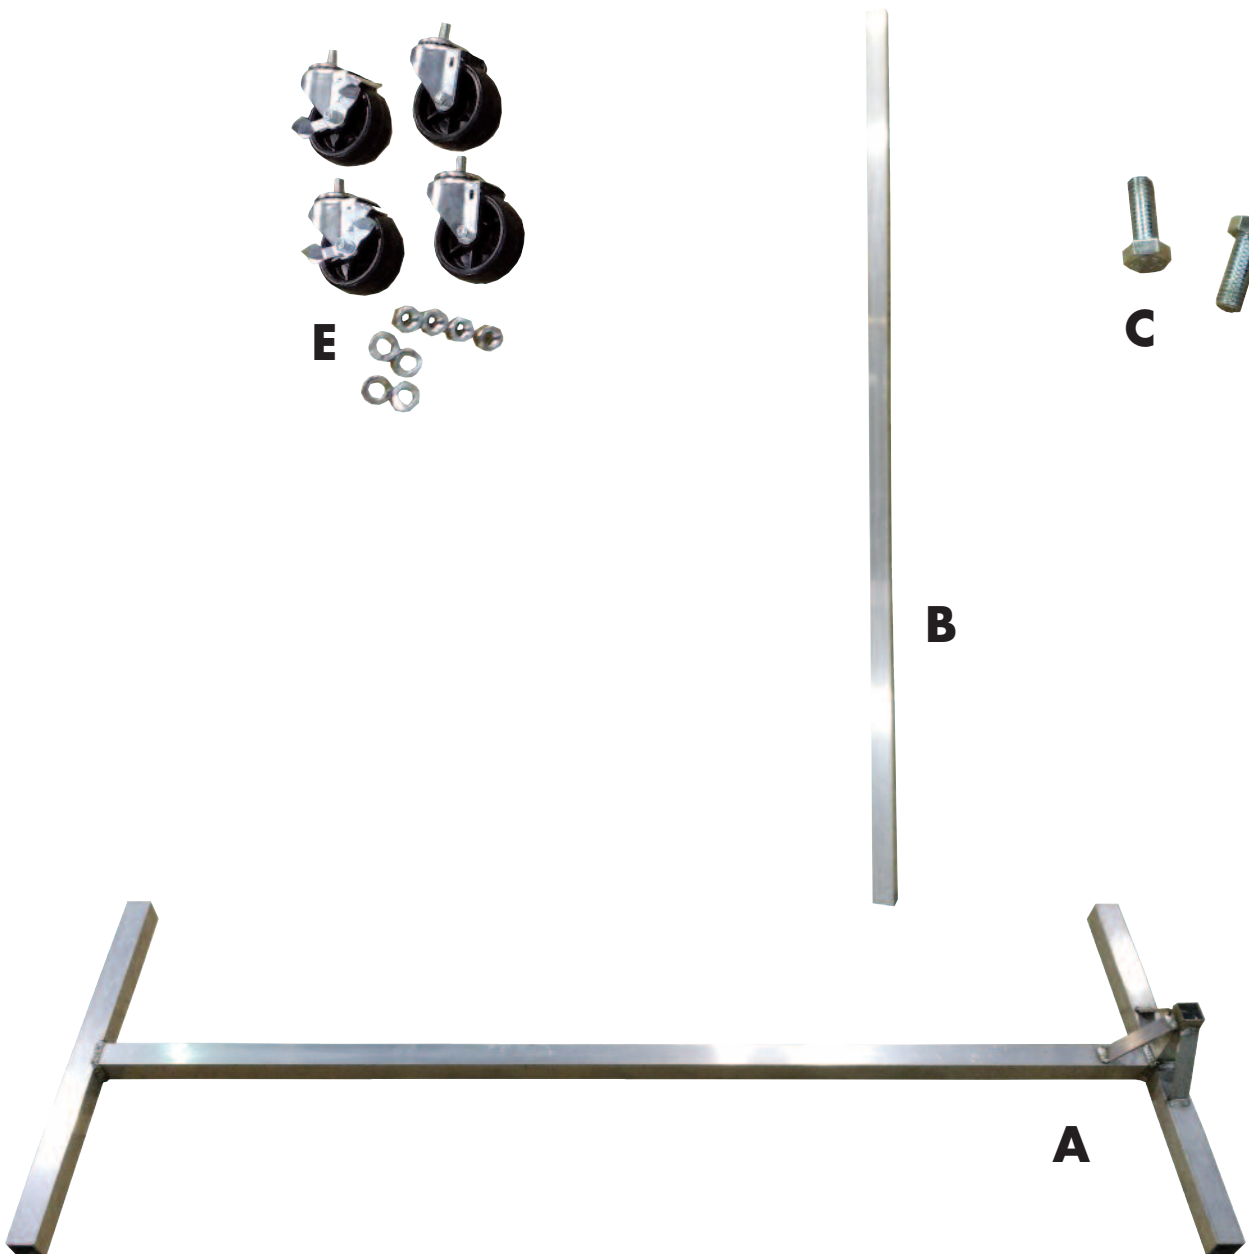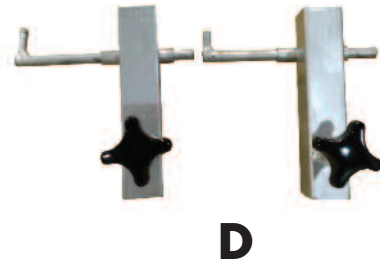

Instructions

1.



- Lay base flat on ground

2.



- Attach wheels to base using the 1/2" lock washers and 1/2" lock nuts.



3.



- Insert square tubing to base using the two 3/8" bolts.

4.



- Attach sliders over the 45" square tubing. One of the hooks on the sliders is smaller than the other. Make sure the slider with the smaller hook is attached first and is on the bottom, then attach the other slider.

5.



- To take your door off your car, remove the pin that secures the door to the car. Line the slider hooks on the Champ Aluminum Door Stand with the hinge on the door.

6.



- Place the door on the hooks.

