

# 4031 Universal Parts Stand


Automotive

Made In USA



## Parts List

Part	Quantity
Support Base -	.1
1-A -	1
2-A -	1
3-A -	1
4-A -	2
5-A -	2
6-A -	1
7-A -	1
8-A -	2

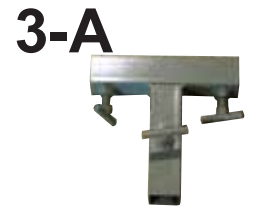

5-A



6-A




4-A



7-A



8-A

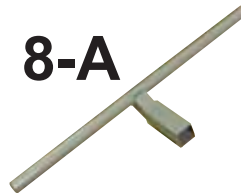

### WARNING

Read all assembly instructions completely before attempting to assemble unit. Improper or incomplete assembly could result in damage to Universal Stand or injury to user.

**Auto Body Toolmart**

Champ Frame Straightening Equipment, Inc.  
[www.autobodytoolmart.com](http://www.autobodytoolmart.com)

2545 Millennium Dr. Elgin, IL 60124 800-382-1200

1.



Adjust the chain on both sides of the base to get the desired length.

2.



Insert the 1-A about 6" down the center of the base and tighten the bolt.

3.



Insert the 3-A onto the center of the base.

4.



Connect each 4-A into both sides of the 3-A and tighten the bolts.

5.



Insert an 8-A into each bar jetting out from the bottom of the base.

6.



Place the 2-A in the 1-A as shown above.

7.



Add a 5-A to each side of the 4-A.

8.



Insert the 7-A on one of the 4-A's.

9.



Finally, on the 4-A that is not holding the 7-A, attach the 6-A.

10.



The Universal Parts Stand is ready to be used. Shown holding two fenders

11.



Mounting a Side Mirror

12.



Mounting a Spoiler

The Universal Parts Stand is capable of holding mirrors, panels, bumpers, door handles, fenders & more.

13.



Mounting a spoiler

14.



15.



Mounting a door handle



# 4032 Universal Part Stand

Motorcycle



Made In USA



## Parts List

Part	Quantity
Support Base -	.1
1-M -	.1
2-M -	.2
3-M -	.1
4-M -	.2
5-M -	.4
6-M -	.1
7-M -	.1
8-M -	.1
9-M -	.1
10-M -	.3

All parts are labeled

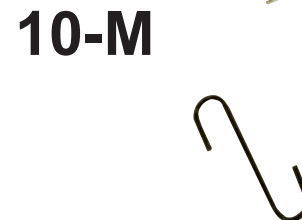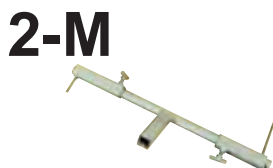

### WARNING

Read all assembly instructions completely before attempting to assemble unit. Improper or incomplete assembly could result in damage to Universal Stand or injury to user.

**Auto Body Toolmart**

**Champ Frame Straightening Equipment, Inc.**

760 Industrial Drive ~ Unit D ~ Cary, IL. 60013 (800) 382-1200

1.



Adjust the chain on both sides of the base to get the desired length.

2.



Insert the 1-M about 6" down the center of the base and tighten the bolt.

3.



Insert the 3-M onto the center of the base.

4.



Connect each 4-M into both sides of the 3-M and tighten the bolts.

5.



Insert each 2-M into both sides of the 1-M and tighten the bolt on the 1-M.

6.



Place the 9-M onto one of the bars jutting out from the bottom of the base.

7.



On the opposite side of the 10-M, place one of the small 5-M's onto the 4-M. The height of the 5-M's are adjustable.

8.



On the same side, add part number 7-M.

9.



Insert the 8-M and tighten the bolt.

10.



On the opposite side, insert the large 5-M followed by a smaller one. Remember, the height is adjustable on all of the 5-M's.

11.



The 5-M is followed by the 6-M. The height is adjustable on the 6-M.

12.



Insert the remaining 5-M and add the 10-M's.

13.



The Universal Parts Stand is ready to be used.

14.



Parts are adjustable to hold all types of motorcycle parts.

15.



16.



17.



18.

