


# 4701 Champ Body Dolly

Made In USA

**CHAMP**  
Frame Straightening Equipment Inc.

## Parts List

- A** 4 - Corner Dolly Supports
- B** 4 - Extension Arms
- C** 2 - Wheels
- D** 28 - 3/8x1" Bolts, 16 - Nuts, 16 - Lock Washers

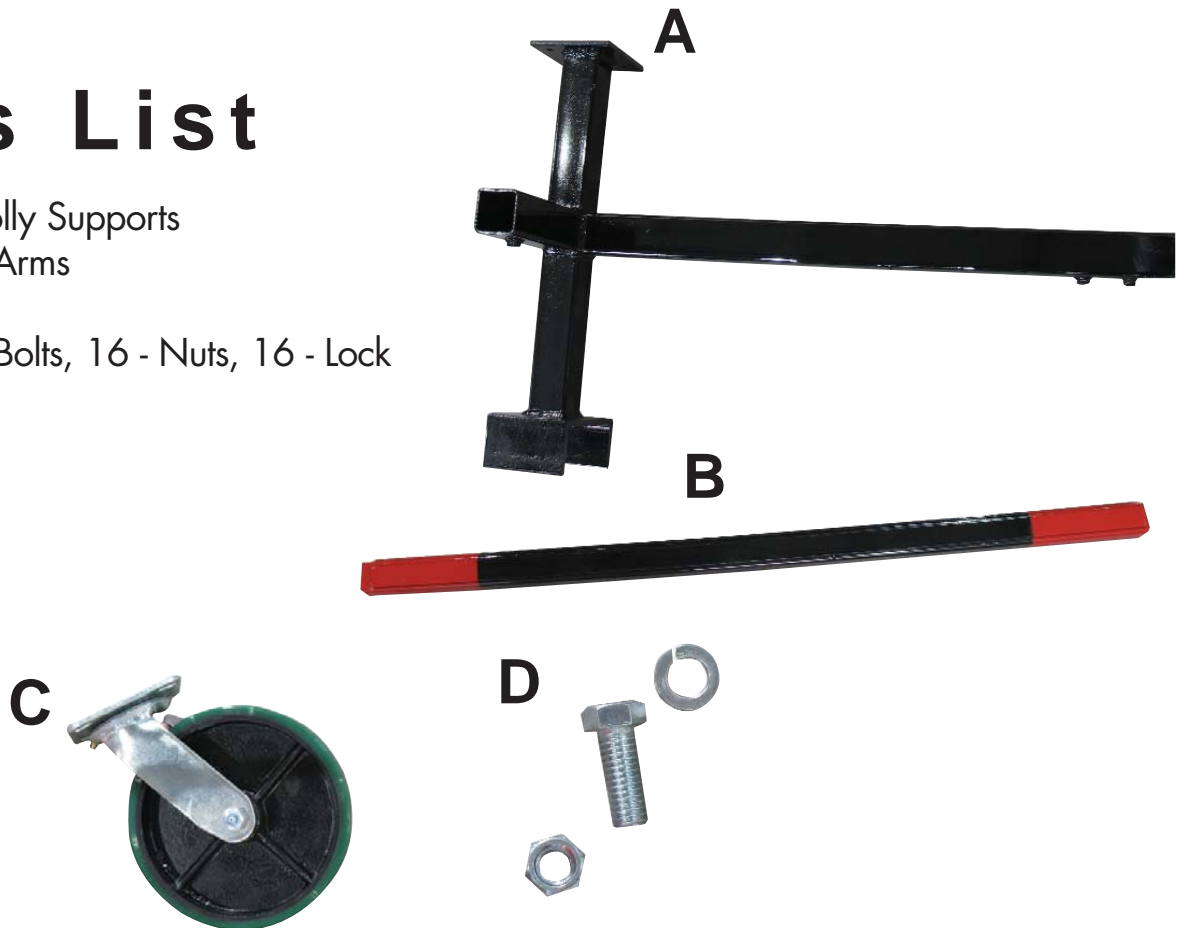

**WARNING** Read all assembly instructions completely before attempting to assemble unit. Improper or incomplete assembly could result in damage to Dolly or injury to user. Body Dolly is designed to hold a maximum of 3,600lbs - DO NOT LOAD MORE WEIGHT THAN 3,600lbs. Attempt to do so may result in damage to Dolly and injury to user.

**Auto Body Toolmart**  
**Champ Frame Straightening Equipment, Inc.**  
2545 Millennium Dr. Elgin, IL 60124 (800) 382-1200  
www.autobodytoolmart.com

1.



Install wheels onto four corner dolly supports with supplied bolts, lock washers & nuts. Tighten securely.

2.



Insert Extension Arms into Corner Dolly Supports. Start by installing the Extension Arm into the long arm of one of the Corner Supports.

3.



Connect it to the short arm of another Corner Support. The Frame Brackets on top of the Corner Brackets should be facing the same way.

4.




Continue attaching Extension Arms in this manner until you have the entire unit connected. Again, check to make sure all Frame Brackets are facing the same direction.

5.



Screw locking bolts into threaded holes on Corner Brackets.

6.

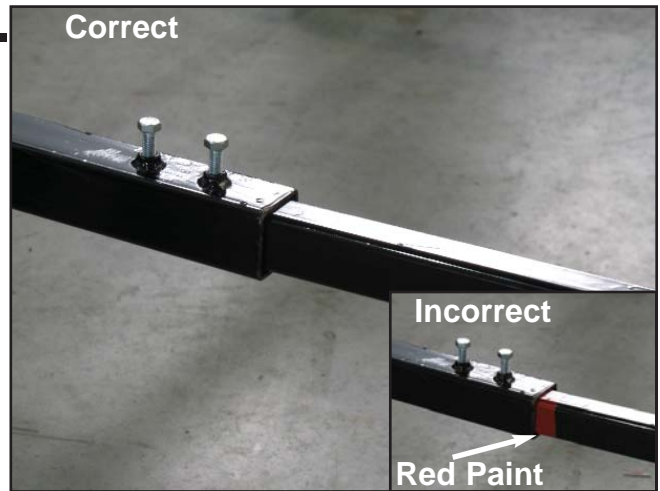

Adjust Dolly to desired width by sliding extension arms in or out and then securely tightening the locking bolts. For safety reasons NO RED PAINT should be showing on the Extension Arms. If red paint is visible then slide bracket into the the Corner support arm until it is no longer showing.



Assembled Body Dolly

**Auto Body Toolmart**  
**Champ Frame Straightening Equipment, Inc.**  
 2545 Millennium Dr. Elgin, IL 60124 (800) 382-1200  
[www.autobodytoolmart.com](http://www.autobodytoolmart.com)