

# Champ Dually Bed Dolly

## Part # 1427

---






---

**CHAMP**®

**Auto Body Toolmart**  
**Champ Frame Straightening Equipment, Inc.**  
760 Industrial Drive ~ Unit D ~ Cary, IL. 60013 (800) 382-1200  
[www.autobodytoolmart.com](http://www.autobodytoolmart.com)

# Parts List

- 2 - Support Bases (a)
- 1 - Support Crossmember (b)
- 2 - Vertical Base Support (c)
- 2 - Bed Support (d)
- 2 - Bed Support Extensions (e)
- 1 - Handle (f)
- 1 - Handle Bracket (g)
- 2 - Base Support Brackets (h)
- 4 - Wheel (i)
- 16 - Bolt, Washer, Nut (j)

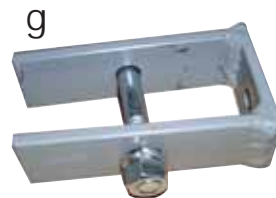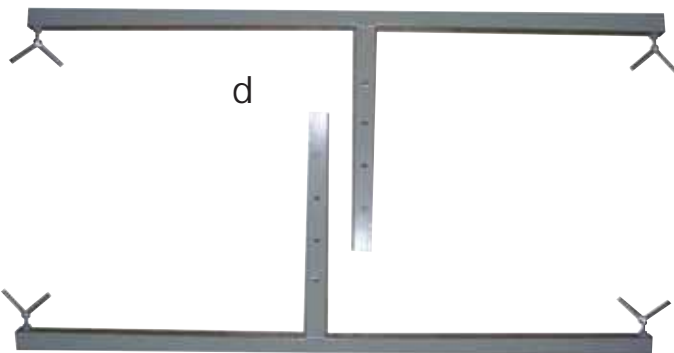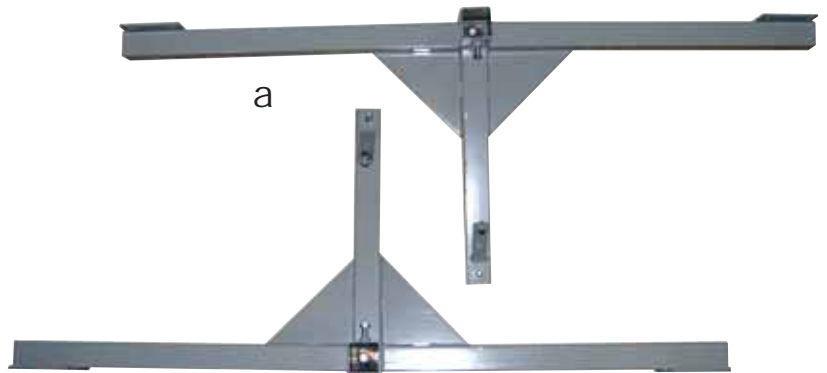

# I n s t r u c t i o n s

---

1.



Attach large caster wheels to both Support Bases with included nuts bolts & washers

2.



Attach Vertical Base Supports to Support Bases. They can be tightened into place with the lock bolts.



3.

Attach Support Crossmember to both Support Bases.

4.



You can adjust the width between the Support Bases by sliding the Support Crossmember in & out of the Bases. Lock into place with the Lock Bolts.



**5.** Attach Base Support Bracket to Vertical Base Support & Support Crossmember. Repeat for both sides.

**6.**



Slide Bed Support into Vertical Base Support. Use pin to set desired height.



**7.**



Attach Handle Bracket to Support Base. Handle can go on either side of Dually Bed Dolly. Attach Handle to Bracket.

**8.**




Slide Bed Support Extensions into ends of Bed Supports. These are adjustable by sliding in & out. Lock into place with the Lock Wing Bolts.



Your Dually Bed Dolly is now ready for use and with proper care your Dually Bed Dolly will give you many years of service.  
If you have any questions call us at 1-800-382-1200.

---

**CAUTION:**  
The Dually Bed Dolly load capacity is 800 lbs.  
Do not exceed load capacity.

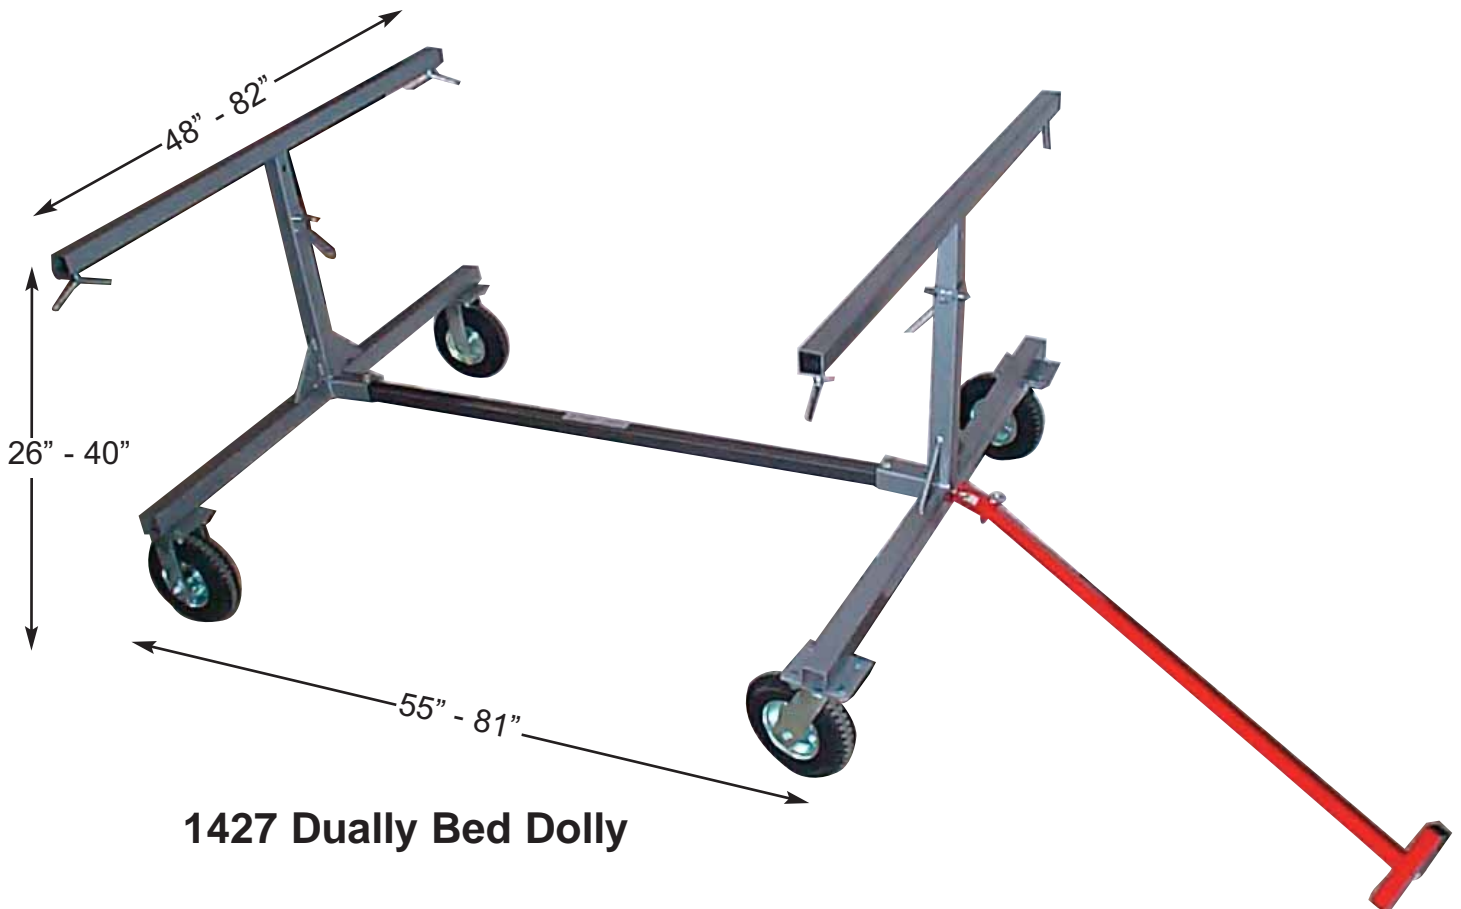

**Auto Body Toolmart**  
**Champ Frame Straightening Equipment, Inc.**  
760 Industrial Drive ~ Unit D ~ Cary, IL. 60013 (800) 382-1200  
[www.autobodytoolmart.com](http://www.autobodytoolmart.com)